

CRAWLTEK R E V O L U T I O N


491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

INSTALLATION INSTRUCTIONS

REAR INNER FENDER

JK33001

FOR USE WITH ALL
JK AND JKU MODELS FROM 2007-2018

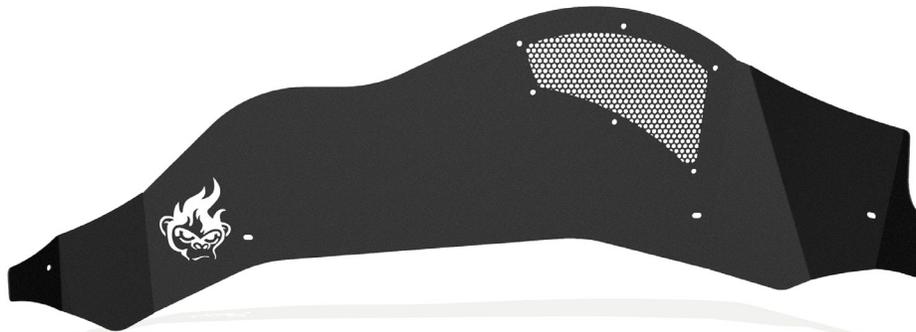

CrawTek YouTube

PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING

2020-11-24

WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06058	2	JK REAR INNER FENDER VENT
06059	1	JK REAR INNER FENDER - DRIVER
06060	1	JK REAR INNER FENDER - PASSENGER
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	8	#10-24 X 3/4" BLACK STAINLESS STEEL BUTTON SOCKET CAP SCREW
	12	#10-24 X 3/8" BLACK STAINLESS STEEL BUTTON SOCKET CAP SCREW
	20	#10-24 ZINC SERRATED FLANGE NUT
	4	#10-24 X 0.020 TO 0.130 LARGE FLANGE RIBBED NUTSERT STEEL

TOOLS REQUIRED

SAFETY GLASSES

PLASTIC INTERIOR REMOVAL TOOL

10MM SOCKET OR WRENCH

1/8" ALLEN WRENCH

5/32" ALLEN WRENCH

DRILL

DRILL BITS

NUT SERT INSTALLATION TOOL

RTV SEALANT

PRE-INSTALLATION NOTES

1. AFTERMARKET FENDER FLARES THAT ACCEPT THE FACTORY INNER FENDER MAY REQUIRE ADDITIONAL MODIFICATION.
2. IF YOUR FACTORY INNER FENDERS ARE ALREADY REMOVED SKIP THE FACTORY FLARE REMOVAL STEPS.



FACTORY FENDER FLARE REMOVAL

STEP 1:

FIRMLY GRAB THE FENDER FLARE AND PULL IT AWAY FROM THE BODY OF THE VEHICLE. USING NECESSARY FORCE AND WORK YOUR WAY AROUND THE FENDER FLARE POPPING OUT THE T-CLIPS THAT SECURE THE FENDER FLARE TO THE BODY..

STEP 2:

ONCE THE FENDER FLARE IS REMOVED CHECK TO MAKE SURE ALL OF THE T-CLIPS CAME OUT WITH THE FENDER FLARE. IF CLIPS ARE STILL IN THE BODY USE A PLASTIC TRIM REMOVAL TOOL TO TAKE OUT ANY REMAINING CLIPS THAT ARE STILL IN THE BODY.

STEP 3:

REPEAT STEPS 1,2 ON THE OPPOSITE SIDE OF THE VEHICLE.

ASSEMBLING OF THE REAR INNER FENDER

STEP 4:

UTILIZING THE 10-24 X 3/8" SS BUTTON HEAD SOCKET CAP SCREWS AND 10-24 ZINC SERRATED FLANGE NUTS TO ASSEMBLE THE INSERTS ON YOUR JEEP JK WRANGLER REAR INNER FENDERS.



INSTALLATION OF THE REAR INNER FENDER

STEP 5:

DRILL OUT THE FACTORY 2 HOLES ON THE INSIDE OF THE FENDER WELL USING A 9/32" DRILL BIT. INSTALL 2 #10-24 NUTSERTS INTO THE HOLES THAT WERE DRILLED OUT.



STEP 6:

INSTALL THE INNER FENDER, USING 4 #10-24 3/4" BUTTON HEAD SCREWS.

STEP 7:

REPEAT ON OPPOSITE SIDE.





YOU'RE NOT DONE YET!

Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at sales-crawltek@ridefox.com or call us at 517.278.1039.

*Be sure to show off your jeep to the rest of the CrawlTek Revolution online.
Find us on facebook and instagram to keep up on new products, upcoming events and more action.
Tag us @crawltek for a chance to get featured*

