

CRAWLTEK R E V O L U T I O N


491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

INSTALLATION INSTRUCTIONS

LICENSE PLATE RELOCATION

JK38001

FOR USE WITH ALL
JK AND JKU MODELS FROM 2007-2018

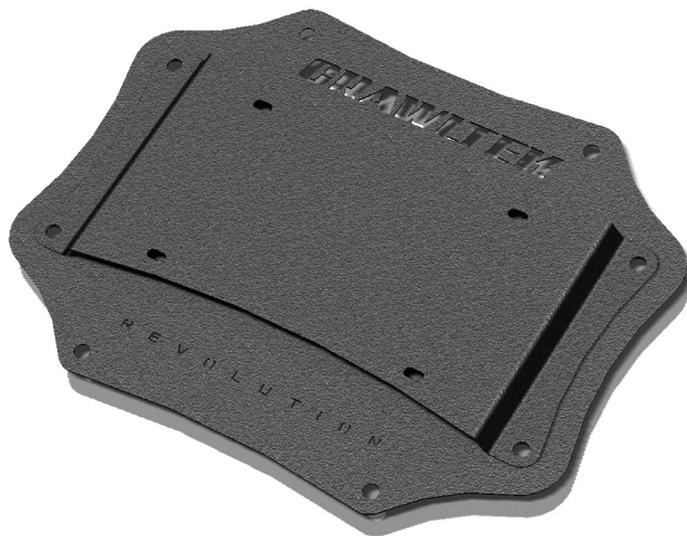

CrawlTek YouTube

PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING

2020-11-24

WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06061	1	LICENSE PLATE DELETE
06062	1	LICENSE PLATE RELOCATION
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	8	M8-1.25 X 20 BLACK STAINLESS STEEL BUTTON SOCKET CAP SCREW
	1	1" ID & .030"-.080" PLASTIC PLUG (MCMMASTER 9750K26)
	2	1/2" ID & .030"-.080" PLASTIC PLUG (MCMMASTER 9750K22)

TOOLS REQUIRED

13MM SOCKET
14MM SOCKET
3/16" ALLEN WRENCH OR SOCKET
1/2" WRENCH
WIRE CUTTERS/ STRIPPERS
WIRE CRIMPERS
HEAT GUN

FACTORY TIRE CARRIER REMOVAL

STEP 1:

REMOVE SPARE TIRE. REMOVE 4 SCREWS MOUNTING THE 3RD BRACKET LIGHT BRACKET. UNPLUG LIGHT.

STEP 2:

REMOVE THE SPARE TIRE MOUNTING BRACKET (8) BOLTS USING A 13MM SOCKET.

STEP 3:

REMOVE 2 SCREWS HOLDING THE LICENSE PLATE BRACKET.



BRAKE LIGHT WIRING (OPTIONAL)

STEP 4:

REMOVE THE OUTSIDE COVER OF THE PASSENGER REAR SEAT BELT. REMOVE THE TWO SCREWS HOLDING THE PLASTIC COVER TO THE FLOOR. REMOVE NUT INSIDE SEAT BELT HOUSING. (THIS IS ALLOW ACCESS TO THE ROLLBAR WIRING)

STEP 5:

ROUTE LICENSE PLATE WIRING THROUGH TAILGATE VENT.

STEP 6:

REMOVE PLASTIC TAILGAURD GUARD AND RELEASE 5 SPRING CLIPS, ROUTE WIRING THROUGH TAILGATE GUARD THROUGH AND THROUGH THE FACTORY HARNESS.

STEP 7:

LOCATE THE FOLLOWING WIRES IN THE ROLL BAR HARNESS AND VERIFY WITH A TEST METER.

- WHITE/VIOLET RUNNING LIGHT (LICENSE PLATE LIGHT) 12V +
- WHITE/BROWN BRAKE LIGHT 12V+
- BLACK GROUND 12V -

INSTALLATION OF THE LICENSE PLATE RELOCATION

STEP 6:

BOLT DELETE PLATE IN PLACE WITH TOP AND BOTTOM BOLTS.

STEP 7:

INSTALL LICENSE PLATE LIGHT / BRAKE LIGHT (NOT SUPPLIED) AND LICENSE PLATE ONTO RELOCATION BRACKET.

STEP 8:

PLUG LIGHT HARNESS IN.

STEP 9:

INSTALL LICENSE PLATE RELOCATION BRACKET.

STEP 10:

VERIFY ALL LIGHTS WORK.





YOU'RE NOT DONE YET!

Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at sales-crawltek@ridefox.com or call us at 517.278.1039.

*Be sure to show off your jeep to the rest of the CrawlTek Revolution online.
Find us on facebook and instagram to keep up on new products, upcoming events and more action.
Tag us @crawltek for a chance to get featured*

