

# **CRAWL**TEK R E V O L U T I O N


491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039  
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

## INSTALLATION INSTRUCTIONS

### PYRO ROCKER GUARDS

#### JK41401 - 4 DOOR

FOR USE WITH ALL  
JK AND JKU MODELS FROM 2007-2018

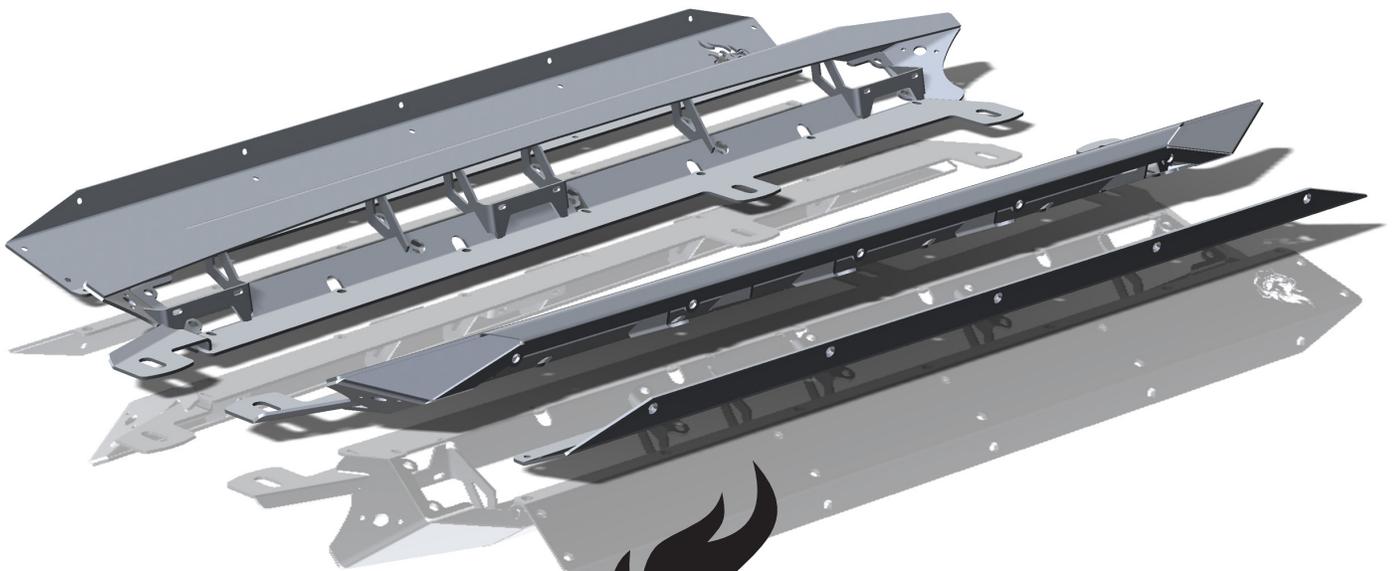

CrawlTek YouTube

**PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING**

2020-11-24

## WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06076	1	JK 4 DOOR ROCKER GUARD - DRIVER
06075	1	JK 4 DOOR ROCKER GUARD - PASSENGER
06078	1	JK 4 DOOR OUTER PANEL - DRIVER
06077	1	JK 4 DOOR OUTER PANEL - PASSENGER
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	44	5/16"-18 X 1" BLACK STAINLESS STEEL FLAT SOCKET CAP SCREW
	24	5/16"-18 PANEL RANGE:.025"-.150" CENTER 9/16" EXTRUDED U NUT
	20	5/16"-18 ZINC SERRATED HEX FLANGE NUT
	12	M6-1.0 X 25MM CLASS 10.9 YELLOW ZINC FINISH HEX CAP SCREW
	12	M6 X 12MM OD YELLOW ZINC GENERAL PURPOSE FLAT WASHER
	12	M6-1.0 FREE SPINNING WASHER NUT 19MM OD YELLOW ZINC

## TOOLS REQUIRED

SAFETY GLASSES

18MM SOCKET OR WRENCH

10MM WRENCH OR SOCKET

1/2" SOCKET OR WRENCH

5/8" SOCKET OR WRENCH

ANTI SIEZE

SMALL HAMMER

## FACTORY ROCK RAIL REMOVAL (IF EQUIPPED)

### STEP 1:

REMOVE (X) BOLTS UNDER EACH SIDE OF THE VEHICLE.

### STEP 2:

REMOVE (6) NUTS ALONG EACH PINCH SEAM.

### STEP 3:

REMOVE OEM ROCK RAILS.



## INSTALLATION OF ROCK LIGHTS (OPTIONAL)

### STEP 3:

IF INSTALLING OPTIONAL LIGHTS INSTALL NOW. USING HARDWARE SUPPLIED BY LIGHT MANUFACTURER, INSTALL THE LIGHTS BEHIND THE ROCKER GUARD.

## INSTALLATION OF THE ROCKER GUARDS

### STEP 4:

REMOVE BODY MOUNT BOLTS (3).

### STEP 5:

USING ORIGINAL BODY MOUNT BOLTS SET ROCKER GUARD FRAME IN PLACE, DO NOT TIGHTEN.

### STEP 6:

USING THE SUPPLIED M6 HARDWARE ATTACH ROCKER TO THE OUTSIDE OF THE PINCH SEAM.

### STEP 7:

RUN WIRING FOR ROCK LIGHTS AND CONNECT TO SWITCH.

### STEP 8:

TIGHTEN ALL BOLTS FOR ROCKER GUARD FRAME.

### STEP 9:

INSTALL U-NUTS IN TO ROCKER GUARD FRAME.

### STEP 10:

INSTALL OUTER ROCKER GUARD PANEL WITH 5/16 HARDWARE.

### STEP 11:

REPEAT ON OPPOSITE SIDE.





## **YOU'RE NOT DONE YET!**

*Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at [sales-crawltek@ridefox.com](mailto:sales-crawltek@ridefox.com) or call us at 517.278.1039.*

*Be sure to show off your jeep to the rest of the CrawlTek Revolution online. Find us on facebook and instagram to keep up on new products, upcoming events and more action. Tag us @crawltek for a chance to get featured*

